


Automatic Transmission Fluid and Filter Replacement

Tools Required

- [J 6125-1B](#) Slide Hammer Adapter
- [J 23129](#) Universal Seal Remover
- [J 36850](#) Transjel Lubricant

Removal Procedure

1. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) .
2. Place a suitable drain pan under the transmission fluid drain plug.

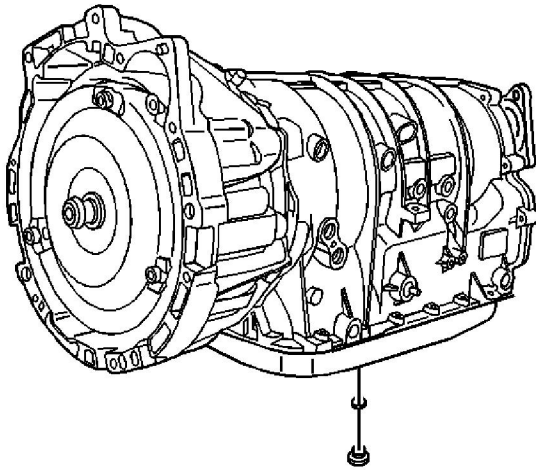


3. Remove and discard the transmission fluid drain plug.
4. Allow the transmission fluid to drain.
5. Inspect the transmission fluid for discoloration and contamination while draining.

Notice: Refer to [Component Fastener Tightening Notice](#) in the Preface section.


6. After the transmission fluid has finished draining, Install a NEW transmission fluid drain plug.

Tighten

Tighten the fluid drain plug to 20 N·m (15 lb ft).

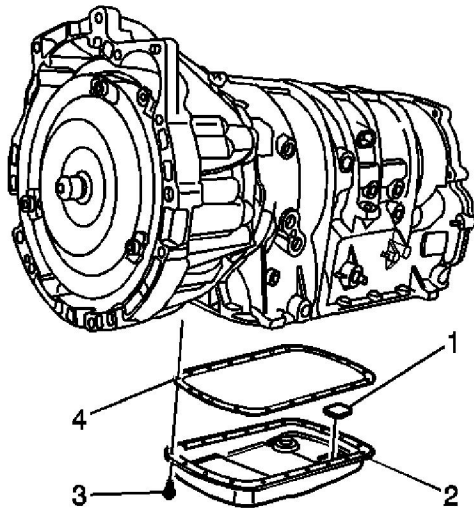


7. Remove the fluid pan bolts (3).
8. Lightly tap the fluid pan (2) with a rubber mallet if necessary in order to loosen.
9. Remove the fluid pan (2) and the gasket (4).
10. Clean and inspect the following for damage or wear.
 - Magnet (1)
 - Pan (2)
 - Bolts (3)
 - Gasket (4)

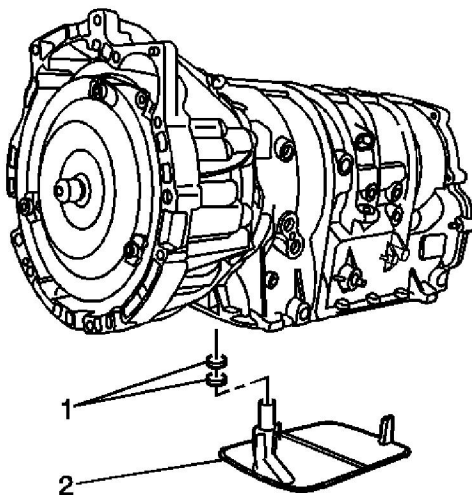


11. Remove the fluid filter (2). Use a long screwdriver in order to pry the fluid filter neck out of the seals.
12. Remove the 2 fluid filter seals (1) using [J 23129](#) and [J 6125-1B](#).

Installation Procedure

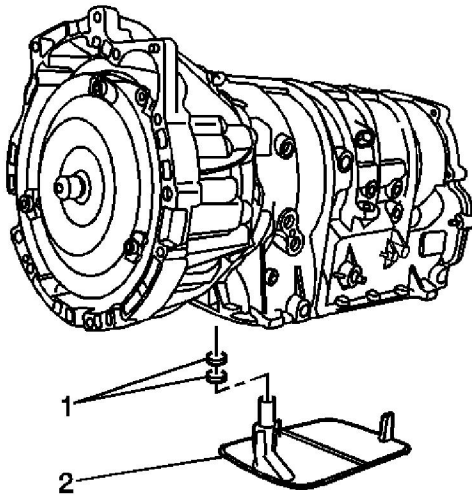

1. Install 2 NEW fluid filter seals (1), onto the transmission fluid filter neck. Coat the new seals with a small amount of [J 36850](#) or petroleum jelly before installation.
2. Install the transmission fluid filter (2) into the case.

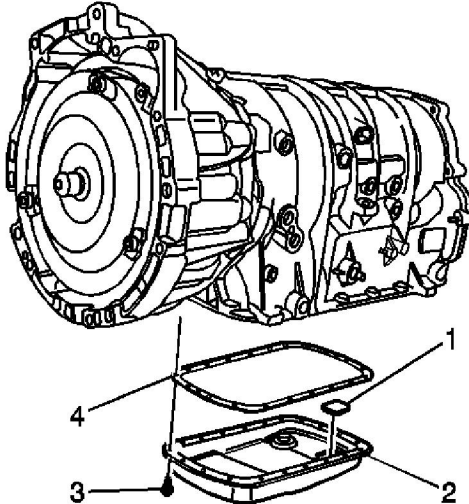

Important: Fluid pan gaskets are reusable. Replace the gasket **ONLY** if the sealing surface is damaged.

3. Install the fluid pan (2) and the gasket (4) at the same time.

Notice: Refer to [Fastener Notice](#) in the Preface section.

4. Install the fluid pan bolts (3).

Tighten

Tighten the bolts to 11 N·m (97 lb in).

5. Fill the transmission to the proper level. Refer to [Transmission Fluid Check](#) .
6. Lower the vehicle.
7. Inspect the oil pan gasket for leaks.