



Shift Control Linkage Replacement (AWD with Solid Link)

Removal Procedure

1. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) in General Information.

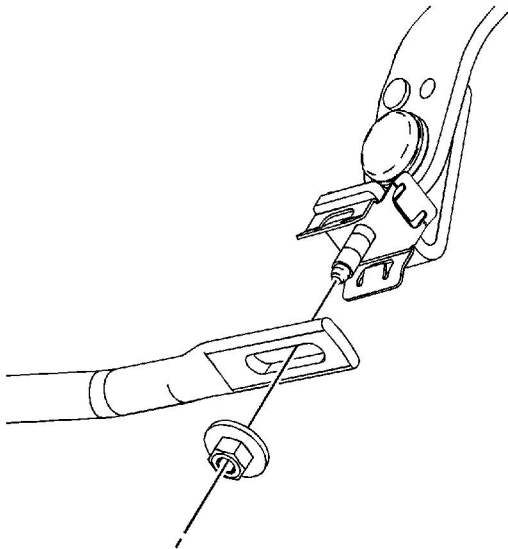


2. Remove the nut from the shift control linkage rod.
3. Disconnect the shift control linkage rod from the shift control assembly.

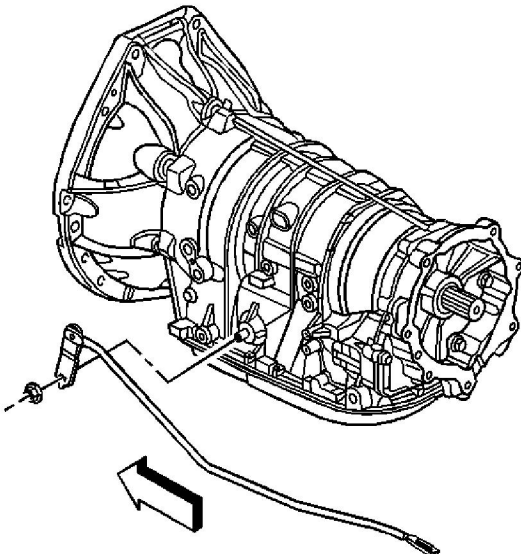

© 2018 General Motors Corporation. All rights reserved.

4. Remove the manual shift shaft nut.
5. Remove the shift control linkage from the vehicle.

Installation Procedure

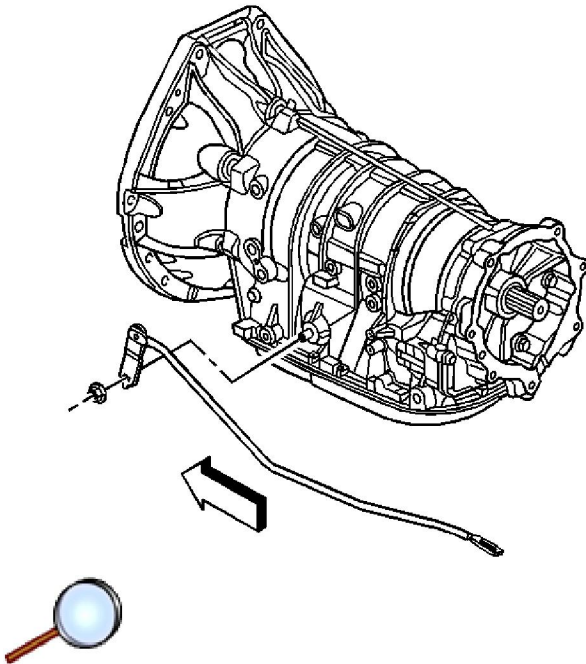


1. Install the shift control linkage to the vehicle.

Notice: Refer to [Fastener Notice](#) in the Preface section.

2. Install the manual shift shaft nut.

Tighten

Tighten the manual shift shaft nut to 9 N·m (80 lb in).

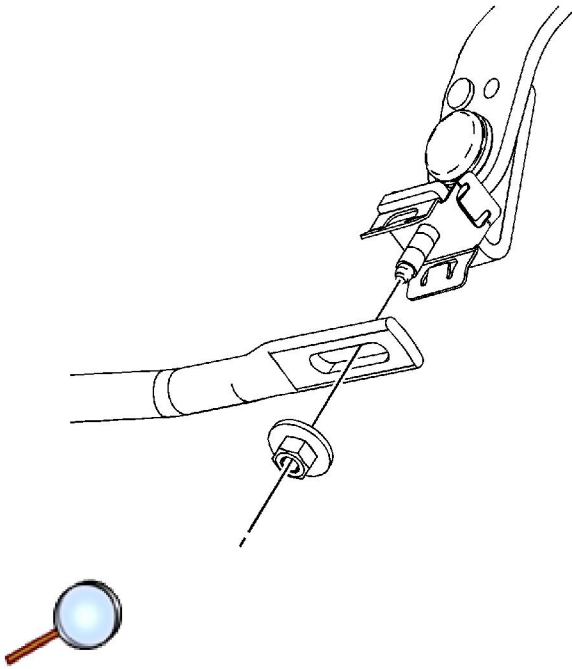

3. Connect the shift control linkage rod to the shift control assembly.
4. Install the nut to the shift control linkage rod.
5. Adjust the shift control linkage. Refer to [Shift Control Linkage Adjustment](#) .
6. Lower the vehicle.