

**W/O REMOTE
ANTI-THEFT
PERSONALITY
(RAP) MODULE**

HOT AT ALL TIMES

**IGNITION
SWITCH**

* VEHICLES BUILT BEFORE 6-24-96
** VEHICLES BUILT AFTER 6-24-96

Controls current flow to
Starter Motor during en-
gine starting.

**STARTER
MOTOR
RELAY**

**AUTOMATIC
TRANSMISSION**

**MANUAL
TRANSMISSION**

Prevents vehicle start up
with clutch engaged.

**CLUTCH PEDAL
POSITION (CPP)
SWITCH JUMPER**

**CLUTCH PEDAL
POSITION (CPP)
SWITCH
(SHOWN WITH
CLUTCH ENGAGED)**

**POWER
DISTRIBUTION**

**POWER
DISTRIBUTION**


***TRANSMISSION
RANGE (TR)
SENSOR**


****DIGITAL
TRANSMISSION
RANGE (DTR)
SENSOR**

**STARTER
MOTOR**

BATTERY

GROUND

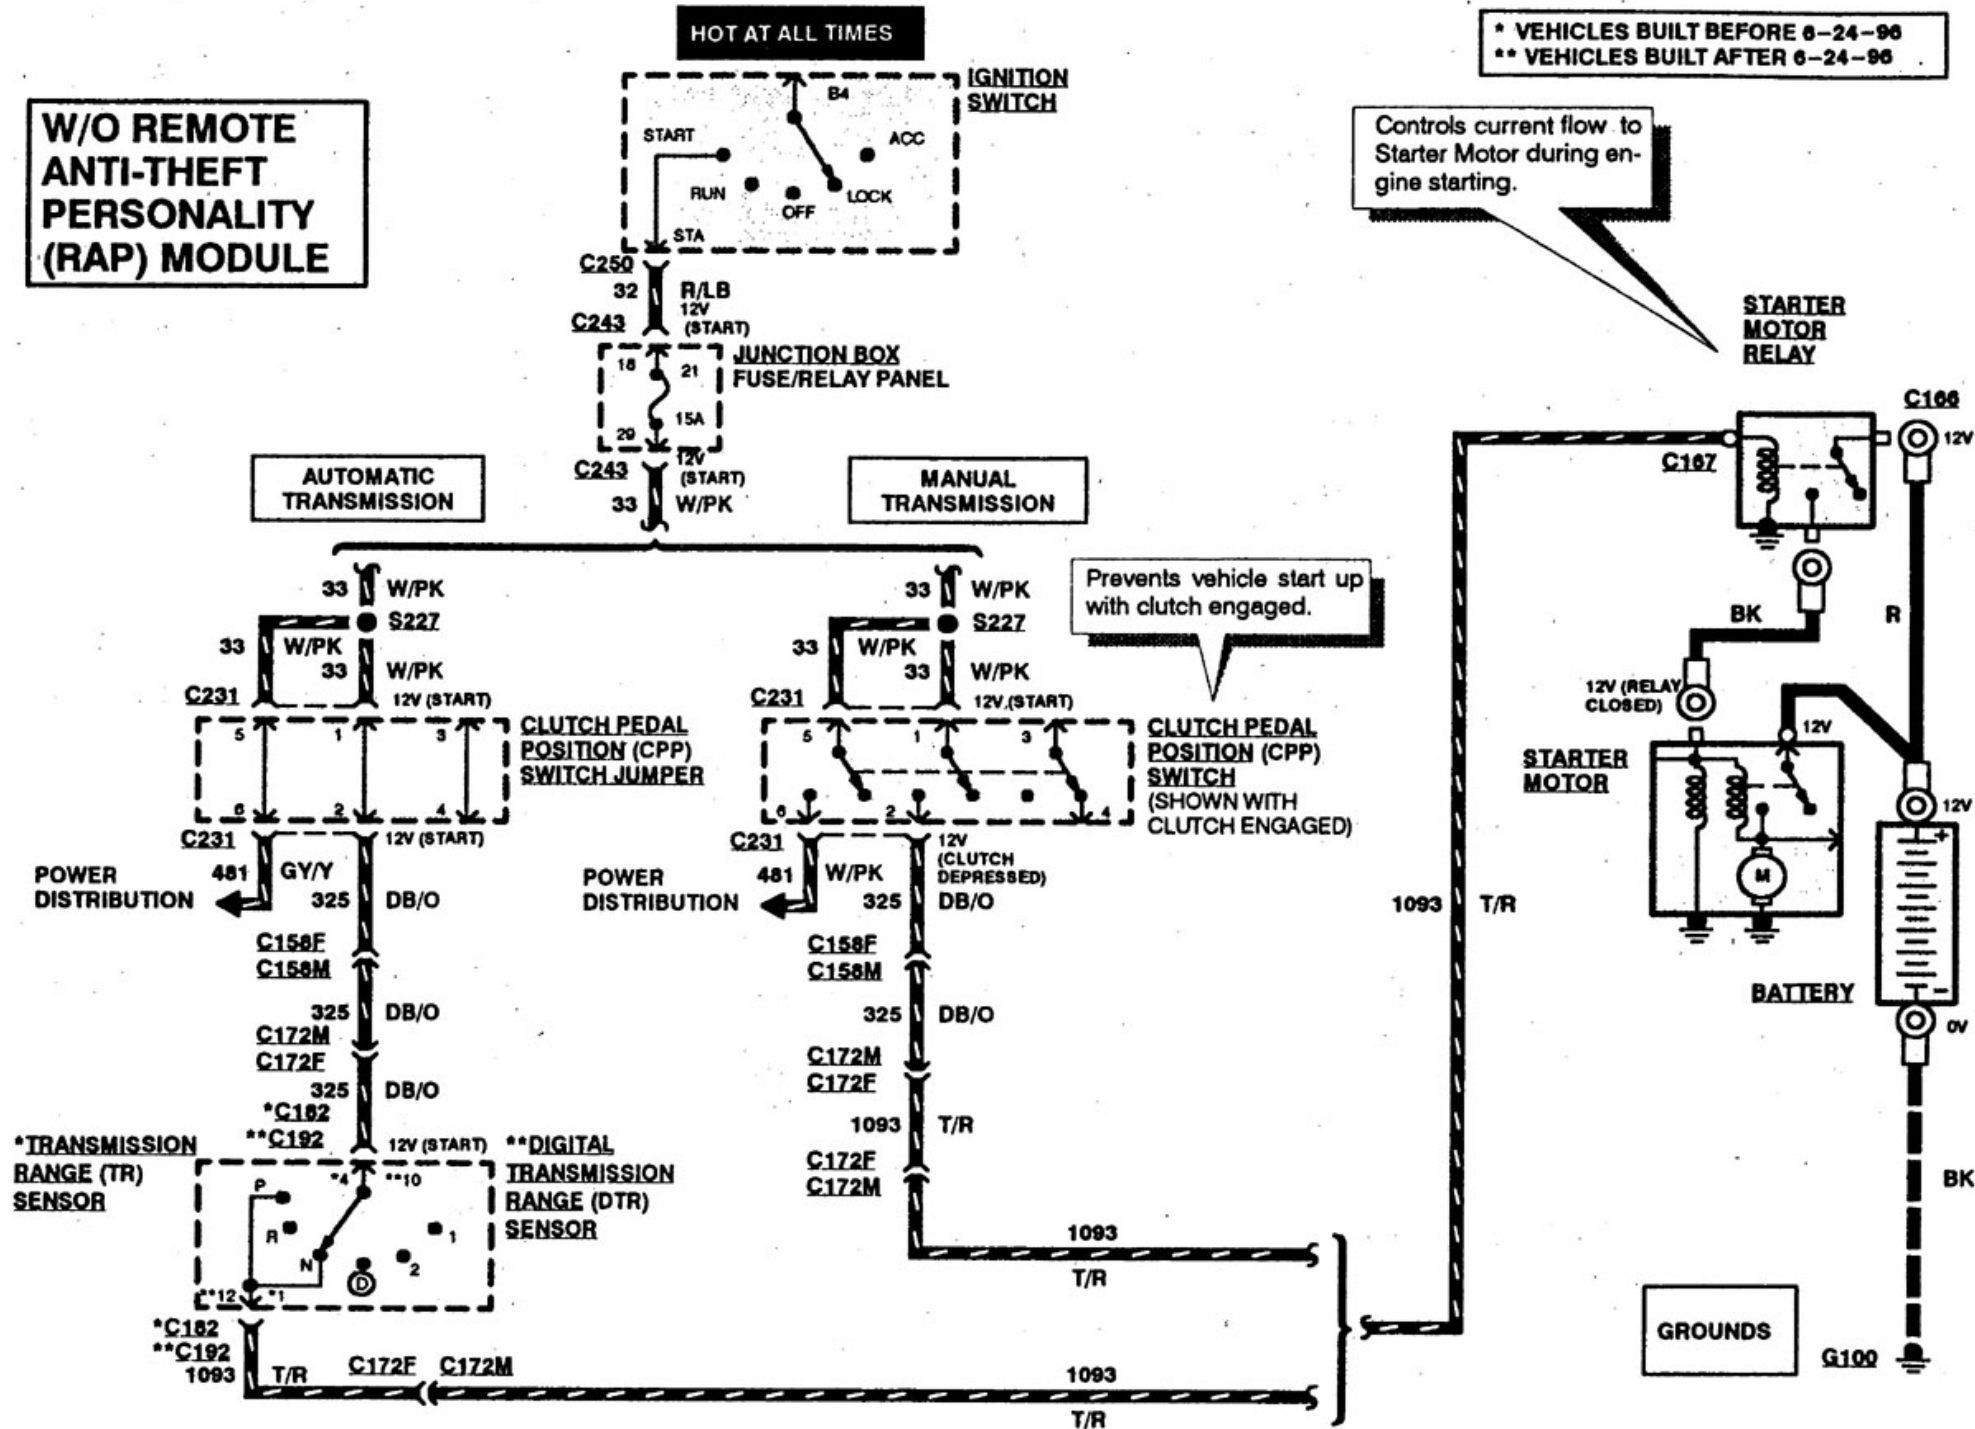

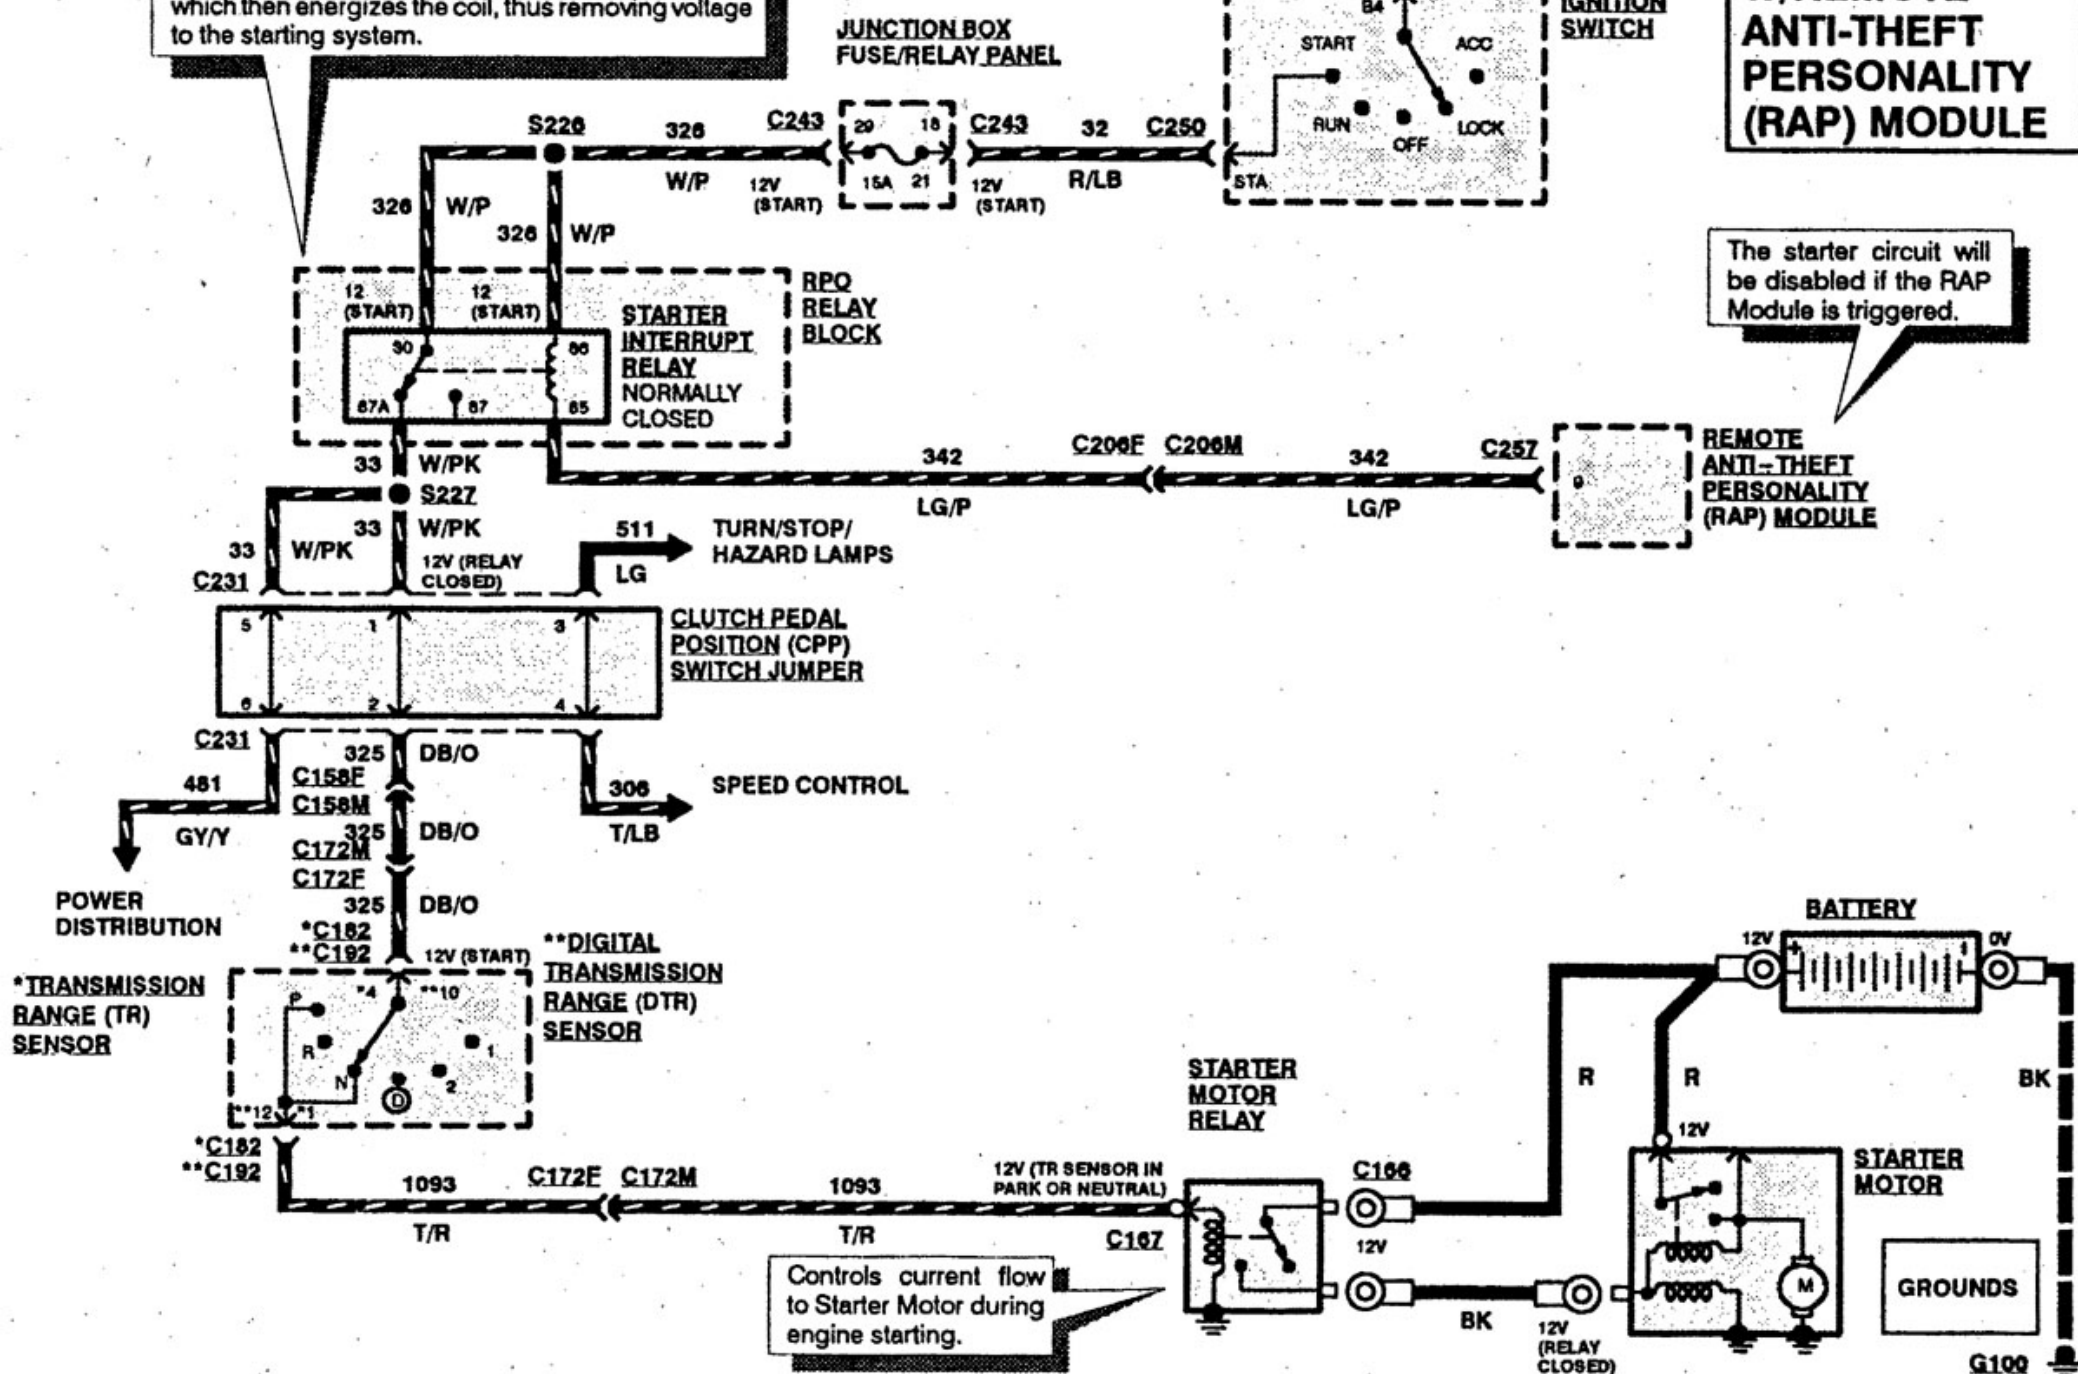

MANUAL TRANSMISSION W/REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE

