


 Oil level check

Number	Designation	Engines 113.990/992/995
BF18.00-P-1001-03I	Oil level	Maximum mm 168
		Minimum mm 137
BF18.00-P-1002-03I	Dipstick indication from 129 mm to 165 mm (oil level too low)	129 mm Replenished oil quantity in liters +2.5
		131 mm Replenished oil quantity in liters +2.4
		133 mm Replenished oil quantity in liters +2.3
		135 mm Replenished oil quantity in liters +2.1
		137 mm Replenished oil quantity in liters +2.0
		139 mm Replenished oil quantity in liters +1.8
		141 mm Replenished oil quantity in liters +1.7
		143 mm Replenished oil quantity in liters +1.6
		145 mm Replenished oil quantity in liters +1.4
		147 mm Replenished oil quantity in liters +1.3
		149 mm Replenished oil quantity in liters +1.2
		151 mm Replenished oil quantity in liters +1.0
		153 mm Replenished oil quantity in liters +0.9
		155 mm Replenished oil quantity in liters +0.8
		157 mm Replenished oil quantity in liters +0.7
		159 mm Replenished oil quantity in liters +0.6
161 mm Replenished oil quantity in liters +0.5		
163 mm Replenished oil quantity in liters +0.3		
165 mm Replenished oil quantity in liters +0.2		
BF18.00-P-1003-03I	Dipstick indication from 167 mm to 169 mm (oil level correct)	167 mm Oil quantity in liters 0.0
		168 mm Oil quantity in liters 0.0
		169 mm Oil quantity in liters 0.0
BF18.00-P-1004-03I	Dipstick indication from 171 mm to 179 mm (oil level too high)	171 mm Extracted oil quantity in liters -0.2
		173 mm Extracted oil quantity in liters -0.3
		175 mm Extracted oil quantity in liters -0.5
		177 mm Extracted oil quantity in liters -0.6

179 mm

Extracted oil quantity in liters

-0.7

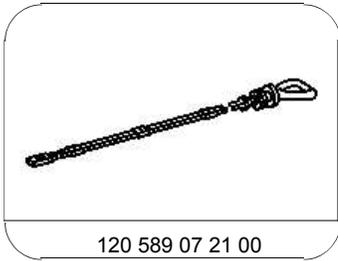


120 589 07 21 00

Measuring rod

ⓘ The vehicle must be horizontal for at least 5 minutes with an engine which is switched off and at operating temperature. Otherwise measurement errors can occur.

- 1 Remove stop plug (1) from oil dipstick guide tube (2).
- 2 Insert dipstick (3) into oil dipstick guide tube (2) until the tip appears in the engine oil pan.
 - Wait for at least 3 seconds before pulling it out.
 - The dipstick (3) must be pushed and guided according to the form of the oil dipstick guide tube (2). Do not kink dipstick (3) in the process.
 - The collar of the dipstick grip end must not touch the oil dipstick guide tube (2).

Illustrated in model 203 with engine 112

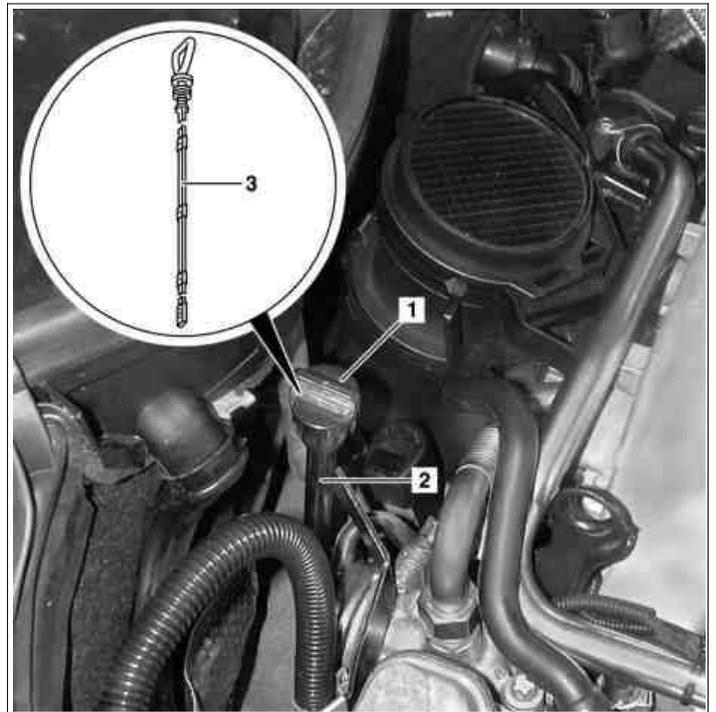

P18.00-2045-12

- 3 Read off engine oil level at dipstick (3).
- 4 Determine replenished oil quantity using oil level table.
- 5 Adjust engine oil level correctly, if required.
- 6 Plug stop plug (1) into oil dipstick guide tube (2).