



Model 166
Model 292

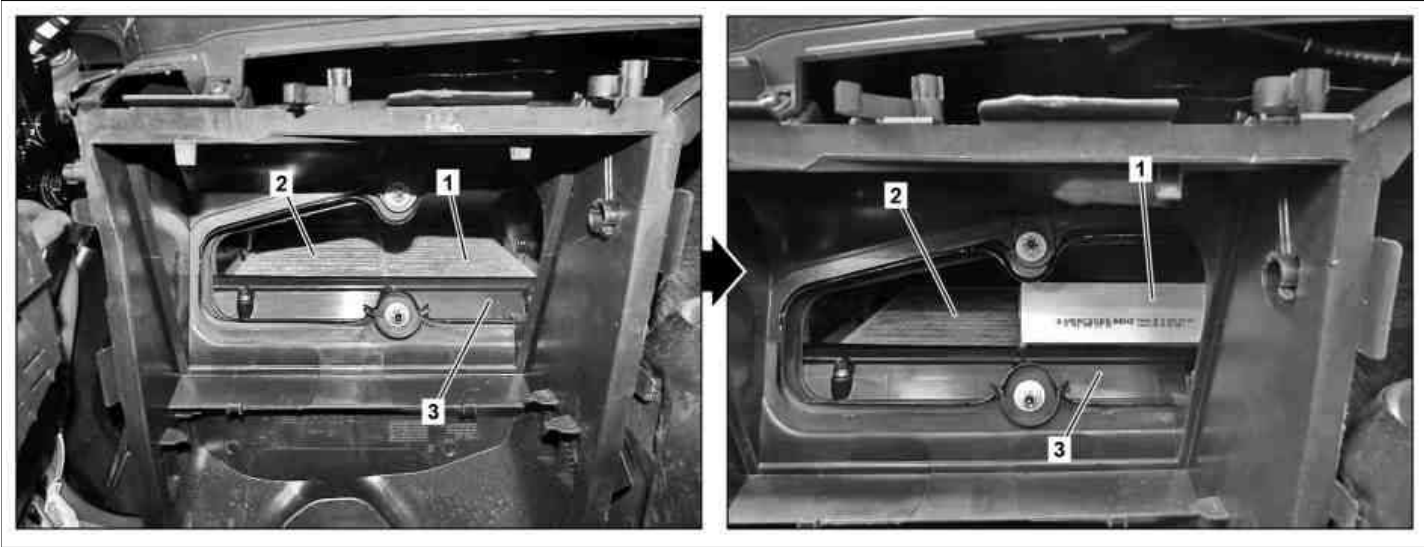

P83.00-2432-08

Shown in model 292


- 1 *Left activated charcoal dust filter*
2 *Right activated charcoal dust filter*
- 3 *Air filter housing*

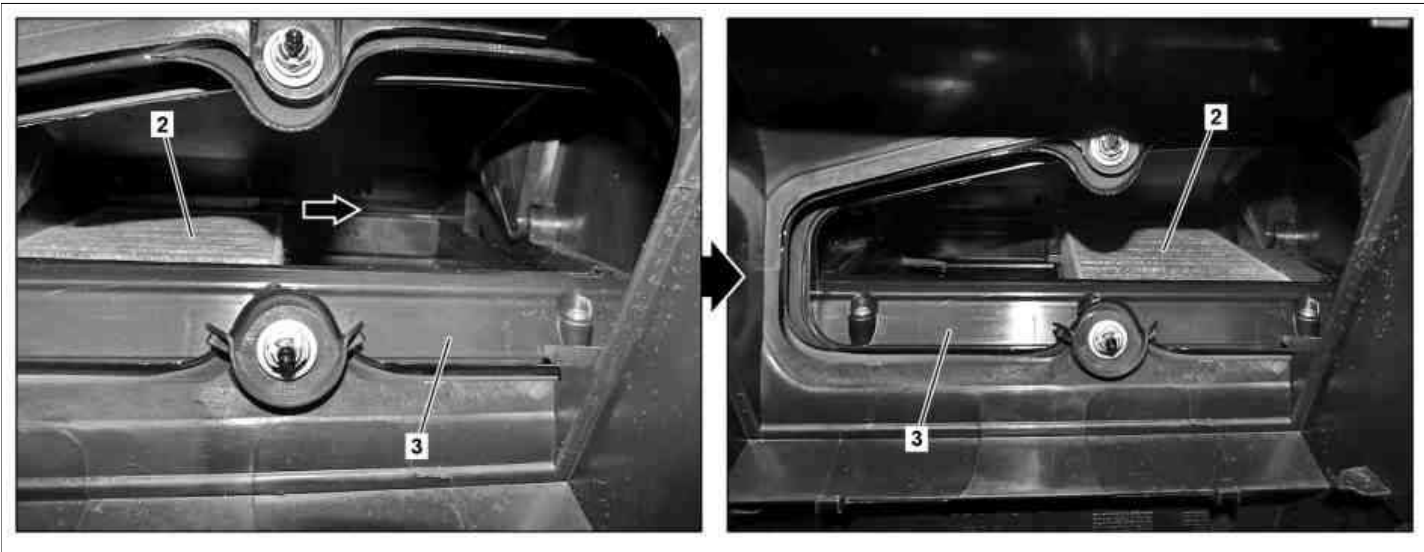






P83.00-2433-08

Shown in model 292

- 2 *Right activated charcoal dust filter*
- 3 *Air filter housing*

	Remove		
1	Remove dust filter for heater/ventilation		AP83.00-P-8381GQ

	Clean		
2	Clean area surrounding dust filter housing (3)		
	Remove		
3	Remove left activated charcoal dust filter (1) from dust filter housing (3)		
4	Slide right activated charcoal dust filter (2) towards (arrow) and remove from dust filter housing (3)		
	Install		
5	Place new right activated charcoal dust filter (2) into dust filter housing (3) and slide in opposite direction (arrow) onto guide lugs	 <p>Check for correct positioning of new right activated charcoal dust filter (2) on guide lugs in dust filter housing (3). Damage can otherwise occur.</p>	
6	Place new left activated charcoal dust filter (1) into dust filter housing (3)	 <p>Check for correct positioning of new left activated charcoal dust filter (1) in the dust filter housing (3). Damage can otherwise occur.</p>	
7	Install dust filter for heater/ventilation		AP83.00-P-8381GQ