


**Model 166**  
 except code Z04 (Light armoring)  
 except code Z05 (B5 armoring on special protection version)

**Model 292**

Shown on model 166.004


- 1 Screw
- 2 Window frame trim
- 3 Expansion rivet
- 4 Pin
- 5 Door lining
- 6 Front door
- 7 Release knob
- 8 Electrical connectors
- 9 Electrical connector
- 10 Inside door opener wire
- 11 Inner door handle actuation
- 12 Mirror triangle
- N69/1 Left front door control unit
- N69/2 Right front door control unit

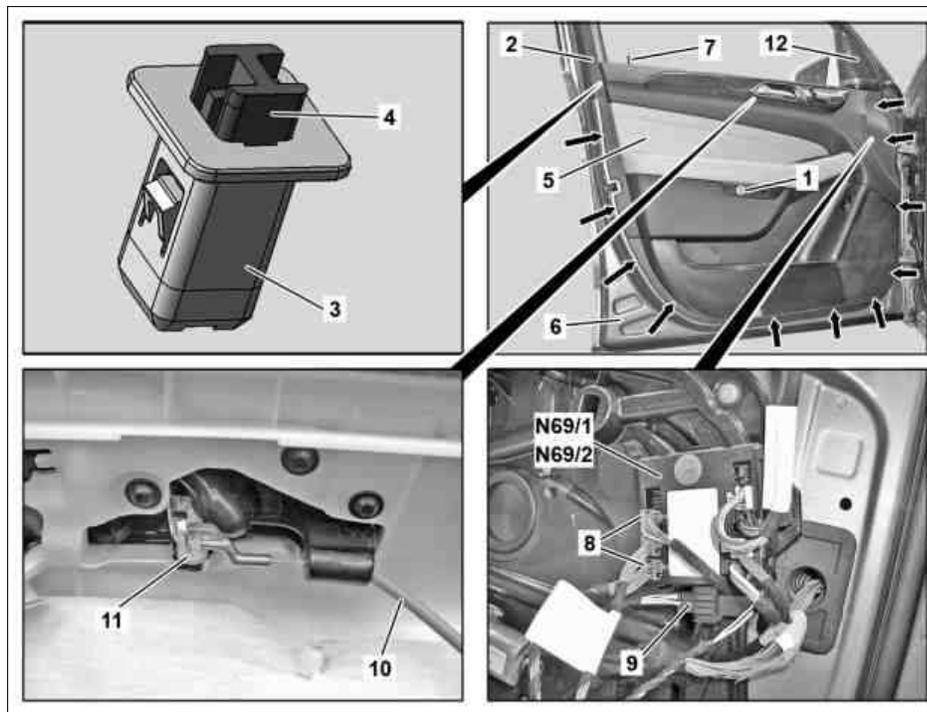

P72.10-4422-06

	<b>Warning</b>	<b>Risk of injury</b> caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
		Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
		<b>Remove/install</b>		
1		Switch off ignition and store transmitter key outside of transmission range (min. 2 m)		
2		Remove cover from screw (1)	Mounting wedge	*110589035900
3		Remove screw (1)		
4.1		Unclip mirror triangle (12)	Model 166 except code 810 (Sound system) except code 811 (Advanced sound system) except code Z04 (Light armoring) except code Z05 (B5 armoring on special protection version) Model 292 except code 810 (Sound system) except code 811 (Advanced sound system)	

4.2	Unclip mirror triangle (12) and disconnect electrical connector	Model 166 with code 810 (Sound system) except code Z04 (Light armoring) except code Z05 (B5 armoring on special protection version) Model 166 with code 811 (Advanced sound system) except code Z04 (Light armoring) except code Z05 (B5 armoring on special protection version) Model 292 with code 810 (Sound system) Model 292 with code 811 (Advanced sound system)	
5	Remove window frame trim (2) starting at mirror triangle	 Mounting wedge	*110589035900
6	Pull pin (4) out of expansion rivet (3) with suitable pliers		
7	Turn pin (4) through 90° and press in expansion rivet (3) until it latches		
8	Grasp expansion rivet (3) with suitable pliers on pin (4) and pull out of door lining (5)		
9	Unclip door lining (5) at mounting clips (arrows) from front door (6)	 Guide assembly wedge as far as possible to mounting clips (arrows). Otherwise, the retaining tabs on the mounting clips (arrows) at the door lining (5) can be damaged.  Mounting wedge	*110589035900
10	Remove door lining (5) upward from front door (6) until sealing lip on door lining is detached from front door (6)		
11	Remove door lining (5) horizontally from front door (6) until electrical connectors (8, 9) on left front door control unit (N69/1) or right front door control unit (N69/2) and inside door opener wire (10) are accessible		
12	Guide out release knob (7) when detaching door lining (5)	 <b>Installation:</b> Ensure that release knob (7) is seated correctly.	
13	Disconnect electrical connectors (8, 9) from left front door control unit (N69/1) or right front door control unit (N69/2)		
14	Unhook inside door opener wire (10) from inner door handle actuation (11)		
15	Remove door lining (5)	 <b>Installation:</b> When positioning door lining (5) on front door (6) ensure that the sealing lip is seated correctly.	
16	Install in the reverse order		

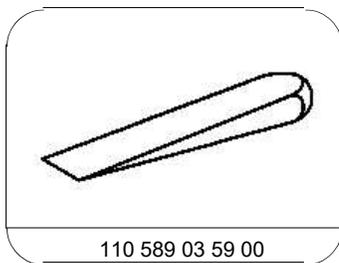

110 589 03 59 00

Mounting wedge