


Tail Lamp Replacement

Removal Procedure

1. Open the liftgate.
2. Remove the body side rear trim panel. Refer to [Body Side Rear Trim Panel Replacement](#) .
3. For the right side only, remove the rear speaker. Refer to [Radio Rear Speaker Replacement](#) .
4. For the left side only, remove the fasteners. Tilt the auxiliary blower motor outward to gain access to the nuts that secure the tail lamp. If equipped, reposition the liftgate close actuator motor control module to access the nuts that secure the tail lamp. Refer to [Auxiliary Blower Motor Replacement](#) and [Liftgate Close Actuator Motor Control Module Replacement](#) .
5. Remove the rear seat belt retractor. Refer to [Seat Belt Retractor Replacement - No. 2 Rear](#) .

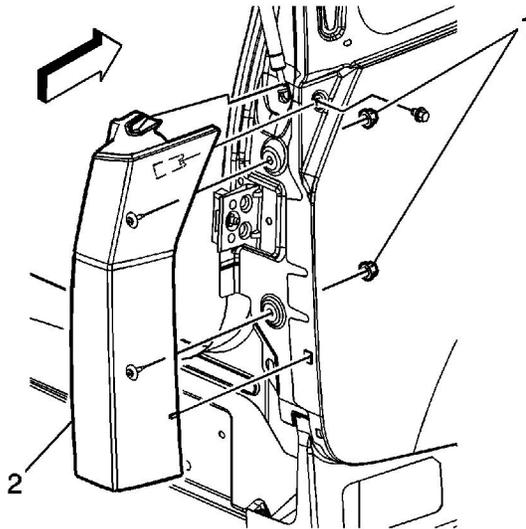


6. Remove the nuts (1) that secure the tail lamp (2) to the body.
7. Disconnect the tail lamp electrical connector.
8. Remove the tail lamp.

Installation Procedure

1. Install the tail lamp assembly.
2. Connect the tail lamp electrical connector

Notice: Refer to [Fastener Notice](#) in the Preface section.

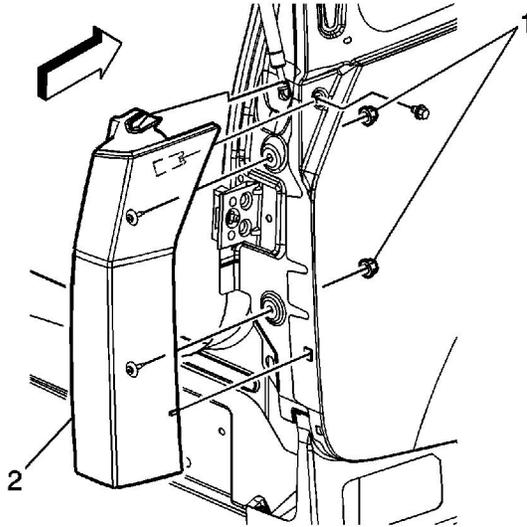

3. Install the nuts (1) that secure the tail lamp (2) to the body.

Tighten

Tighten the tail lamp nuts to 6 N·m (53 lb in).

4. Install the rear seat belt retractor. Refer to [Seat Belt Retractor Replacement - No. 2 Rear](#) .
5. For the right side only, install the rear speaker. Refer to [Radio Rear Speaker Replacement](#) .
6. For the left side only, install the auxiliary blower motor. Refer to [Auxiliary Blower Motor Replacement](#) .
7. For the left side only, install the liftgate close actuator motor control module. Refer to [Liftgate Close Actuator Motor Control Module Replacement](#) .
8. Install the body side rear trim panel. Refer to [Body Side Rear Trim Panel Replacement](#) .
9. Close the liftgate.