


Shift Control Linkage Adjustment (AWD / RWD with Solid Link)

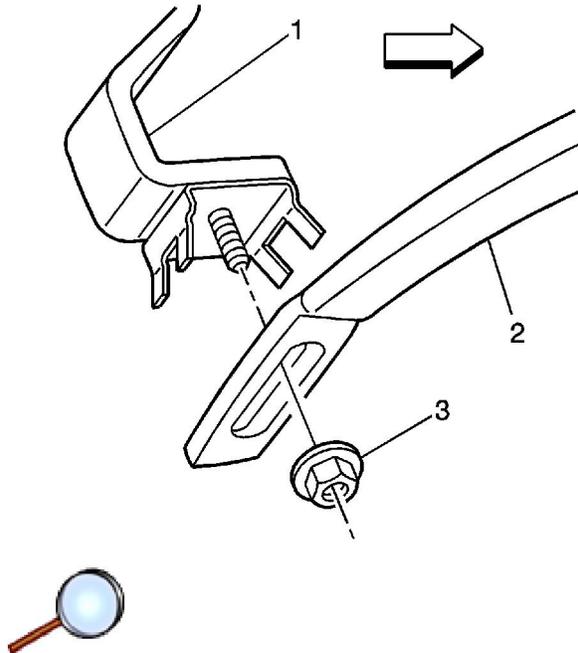

1. Position the shift lever in PARK.
2. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) in General Information.


Notice: Refer to [Fastener Notice](#) in the Preface section.

3. Loosen the shift control linkage adjustment nut (3) and allow the linkage to slide freely.
4. Hold the selector lever on the transmission against the rear stop in the PARK position to eliminate any play.

Tighten

Tighten the shift control linkage adjustment nut to 9 N·m (80 lb in).

5. Lower the vehicle.

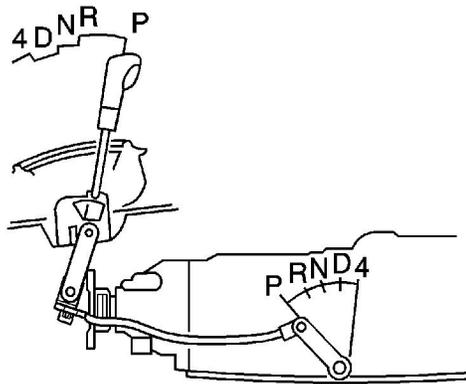

6. Inspect the operation of the starting system with the shift lever in each position. The engine should only crank when the lever is in the PARK or NEUTRAL position.
7. Ensure that the shifter detents align with the gear indicators.
8. Return to the PARK position and check for proper engagement. PARK position should feel solid and not spongy. The shift lever should not be bottomed out on the stop bumper when engaging the PARK position. Readjust and retest if necessary.
9. With the ignition on and the engine not running, ensure a smooth transition from position D to tap mode and back. Ensure that the odometer changes to the gear indicator mode. If the odometer does not change to gear indicator mode, or any binding or rough spots are felt, repeat the linkage adjustment procedure and retest the system.