




































[2008 Saturn Astra](#) | [Astra \(VIN A\) Service Manual](#) | [HVAC](#) | [Heating, Ventilation, and Air Conditioning](#) |

## Repair Instructions

---

Select a Document:

-  [Odor Correction](#)
-  [Refrigerant Recovery and Recharging](#)
-  [Air Conditioning Compressor Oil Balancing](#)
-  [Air Conditioning Compressor Replacement](#)
-  [Air Conditioning Compressor Pulley Replacement](#)
-  [Compressor Clutch Assembly Replacement](#)
-  [Air Conditioning Clutch Coil Replacement](#)
-  [Compressor Pressure Relief Valve Replacement](#)
-  [Sealing Washer Replacement](#)
-  [O-Ring Replacement](#)
-  [Air Conditioning Compressor Hose Replacement](#)
-  [Air Conditioning Evaporator Hose Assembly Replacement](#)
-  [Air Conditioning Refrigerant Service Valve Core Replacement](#)
-  [Receiver and Dehydrator Replacement](#)
-  [Air Conditioning Evaporator Thermal Expansion Valve Replacement](#)
-  [Air Conditioning \(A/C\) Refrigerant Pressure Sensor Replacement](#)
-  [Air Conditioning Condenser Replacement](#)
-  [Blower Case Replacement](#)
-  [HVAC Module Assembly Replacement](#)
-  [Air Conditioning Evaporator Core Replacement](#)
-  [Air Conditioning Evaporator and Blower Module Drain Hose Replacement](#)
-  [Heater Hose Assembly Replacement](#)
-  [Air Inlet Screen Replacement](#)
-  [Passenger Compartment Air Filter Replacement](#)
-  [Blower Motor Resistor Assembly Replacement](#)
-  [Blower Motor Replacement](#)
-  [Instrument Panel Center Air Outlet Replacement](#)
-  [Instrument Panel Outer Air Outlet Replacement - Right Side](#)
-  [Instrument Panel Compartment Air and Radio Cooling Duct Replacement](#)
-  [Rear Floor Air Outlet Replacement](#)
-  [Windshield Defroster Duct Replacement](#)
-  [Floor Air Outlet Duct Replacement - Left Side](#)
-  [Floor Air Outlet Duct Replacement - Right Side](#)
-  [Rear Floor Air Duct Replacement](#)
-  [Heater Core Replacement](#)