

This function supports diagnosis of the automatic transmission.

Monitoring	
Gripping	OK
Slipping	OK
Torque converter Diagnosis	OK
Park pawl Hydraulic components	OK

Blocked shift operations	
Shift operation	OK

Temperatures	
Maximum oil sump temperature	OK
Overheating protection	OK
Maximum temperature of torque converter	OK

Evaluation of filling time	
K38 OK	B08 OK
K27 OK	B05 OK
B06 OK	K81 OK

Evaluation of shift pressure	
K38 OK	B08 OK
K27 OK	B05 OK
B06 OK	K81 OK
Fill time adaptation of torque converter lockup clutch OK	

Multi-disk clutch temperature Status of component	
K38 OK	B08 OK
K27 OK	B05 OK
B06 OK	K81 OK