


Model164, 166, 292

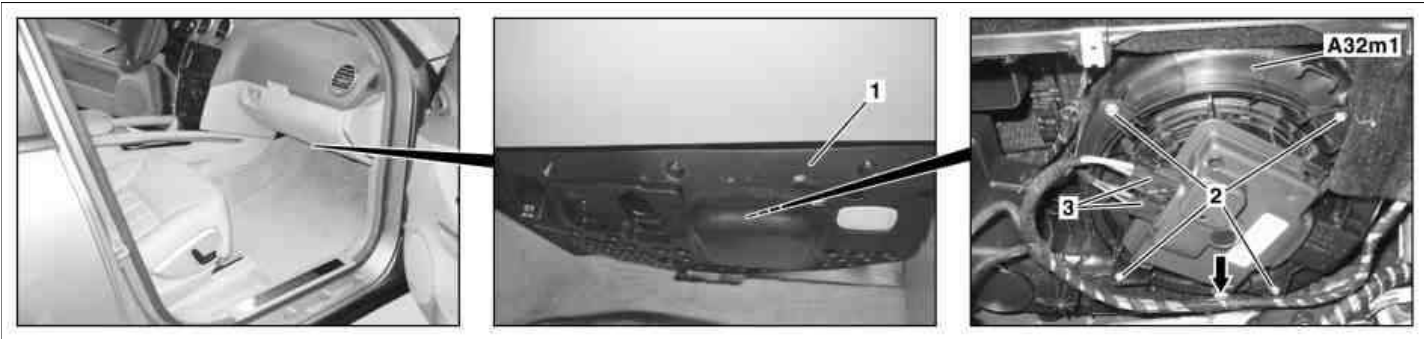

P83.30-4163-07

Shown on model 164.1



- 1

Cover below dashboard
- 2

Bolts
- 3

Electrical connectors
- A32m1

Blower motor

 	Remove/install		
1	Move right front seat all the way to the rear		
2	Switch on ignition and store transmitter key outside of transmission range (min. 2 m)		
3	Remove cover under dashboard (1)	Model 164 Model 166, 292	AR68.10-P-1520GZ AR68.10-P-1520GQ
4	Disconnect electrical connectors (3) from blower motor (A32m1)		
5	Unclip wiring harness (arrow)		
6	Remove bolts (2)		
7	Remove blower motor (A32m1)		
8	Install in the reverse order		