


P88.10-2056-09

Shown on left rear fender

- 1 Fender liner
- 2 Expansion rivets
- 3 Nuts
- 4 Cover
- 5 Bolt
- 6 Mounting wedge

	Remove/Install		
	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the hydraulic hoist and position the four support plates below the hoist support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
1	Raise vehicle.		
2	Remove expansion rivets (2)		
3	Unscrew nuts (3)		
4	Take out cover (4)		
5	Unscrew bolt (5).		
6	Loosen fender liner (1) from rear fender with mounting wedge (6)	 <b>i</b> <b>Installation:</b> Ensure that fender liner (1) is seated correctly.	*110589035900
7	Install in the reverse order		

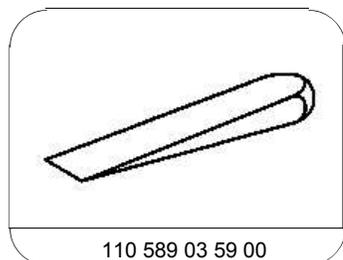

110 589 03 59 00

Mounting wedge